

Choose for the job.



Pneumatic version | Top-press wrapping station

01

Check top support needs

Confirm the load is suitable for a top plate and that the required stroke covers the load range.

02

Check the full load

Confirm pallet size, load height, total weight and stack stability.

03

Verify the daily flow

Include loading, film handling and unloading when checking output.

MODEL TIP

Press support can help a suitable load remain stable; it does not replace correct stacking or load validation.

USEFUL DETAILS FOR YOUR NEXT CHECK

Load-height range + top surface + weight

Prepare before arrival.



Installation detail | Turntable and machine base

01

Confirm the air supply

Match air pressure, flow and quality to the supplied pneumatic press specification.

02

Match the site

Confirm floor support, power and any required air supply against the order.

03

Commission the safeguards

Allow service access and verify the installed safety devices before use.

MODEL TIP

Do not copy the electric-press setup: this version requires the correct pneumatic supply and stroke.

USEFUL DETAILS FOR YOUR NEXT CHECK

Available air supply + required stroke

APPLICATION GUIDE | fyxferpack.com

Application guidance. Follow the supplied machine manual.

Make each run repeatable.



Operation detail | Top support plate and arm

01

Use the approved press setting

Position the load so the top plate contacts the intended support area without crushing it.

02

Prepare & clear

Check the pallet and stack; keep people outside the operating area.

03

Inspect the finished load

After stopping, check containment, pallet attachment and the film tail.

MODEL TIP

Keep people clear of both the descending top plate and rotating pallet.

USEFUL DETAILS FOR YOUR NEXT CHECK

Top-contact area photo

PNEUMATIC TOP PRESS

MAINTENANCE TIPS

Keep the essentials ready.



Service detail | Pneumatic cylinder and lift guides

01

Inspect pneumatic components

Check accessible hoses and fittings for damage or leakage using the manual procedure.

02

Clean the film path

After safe isolation, remove film debris from approved access areas using the specified method.

03

Follow the service plan

Check sensors, drives and fasteners at the intervals in the actual manual.

MODEL TIP

Isolate electrical and pneumatic energy, release stored pressure and secure gravity-driven parts before service.

USEFUL DETAILS FOR YOUR NEXT CHECK

Air hose and fitting condition

APPLICATION GUIDE | fyxferpack.com

Application guidance. Follow the supplied machine manual.

Find the cause first.



Control detail | Operator panel and emergency stop

01

Press is weak or slow

Check the displayed status and air supply; report leaks or inconsistent movement.

02

Film keeps breaking

Check roll damage, threading, sharp load edges and the approved wrap force.

03

Load is loose or crushed

Review stacking and the recipe; validate containment after every adjustment.


MODEL TIP

Do not keep increasing air pressure to overcome a blockage or unsuitable load.

USEFUL DETAILS FOR YOUR NEXT CHECK

Alarm + supply status

Get more from the setup.

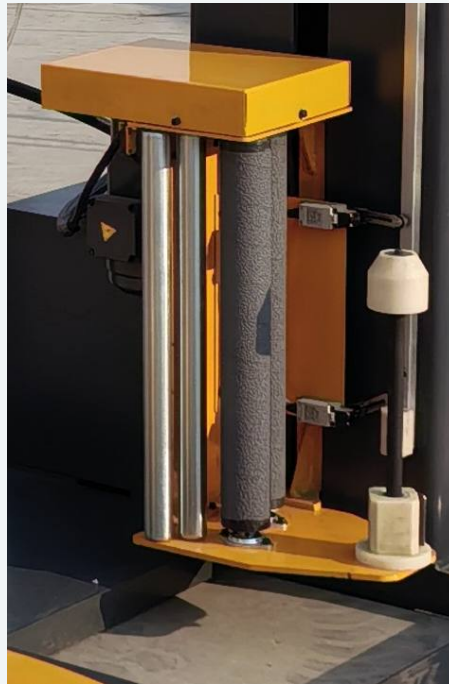

Film detail | Carriage, rollers and roll support

01

Trial the lightest load

Validate the top contact and wrapping recipe on the most easily deformed product.

02

Measure film per load

Compare film mass across similar accepted loads using the same quality target.

03

Save the approved recipe

Record film grade, wrap pattern and the load dimensions for repeat use.

MODEL TIP

Save the accepted press and film settings together for each load type.

USEFUL DETAILS FOR YOUR NEXT CHECK

Lightest and most fragile load sample